
HURRICANE EVACUATION TRAFFIC FLOW PLAN

US 278 AT SC 170

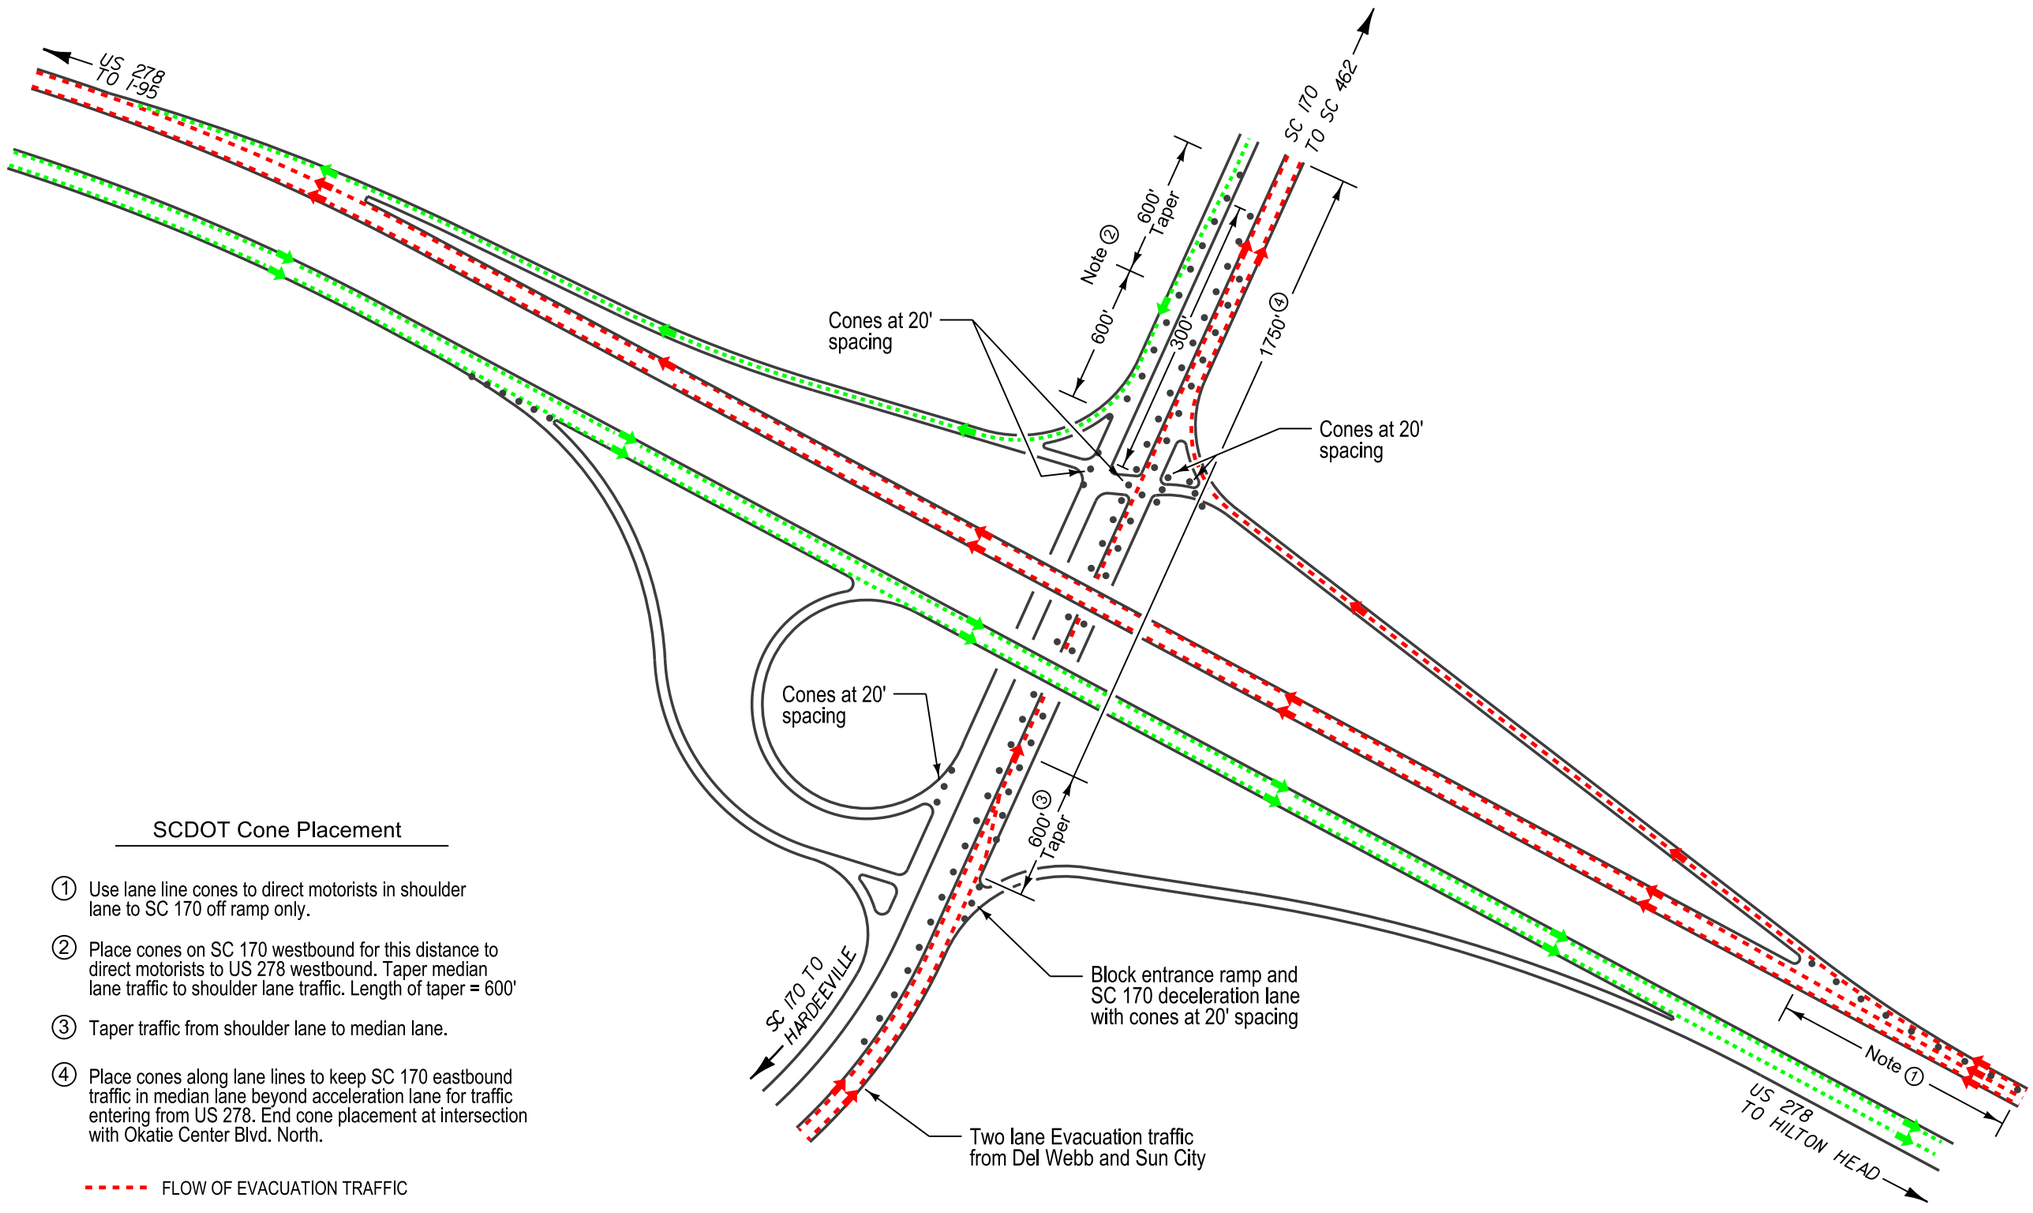

SCDOT Cone Placement

① Use lane line cones to direct motorists in shoulder lane to SC 170 off ramp only.

② Place cones on SC 170 westbound for this distance to direct motorists to US 278 westbound. Taper median lane traffic to shoulder lane traffic. Length of taper = 600'

③ Taper traffic from shoulder lane to median lane.

④ Place cones along lane lines to keep SC 170 eastbound traffic in median lane beyond acceleration lane for traffic entering from US 278. End cone placement at intersection with Okatie Center Blvd. North.

- - - - - FLOW OF EVACUATION TRAFFIC

. . . . . FLOW OF NORMAL TRAFFIC

• • • All cones at 40' spacing unless othwise noted

Beaufort County

SCDOT

South Carolina Department of Transportation

April 15, 2014